



The Frugal Artist

Keith
DAVEY

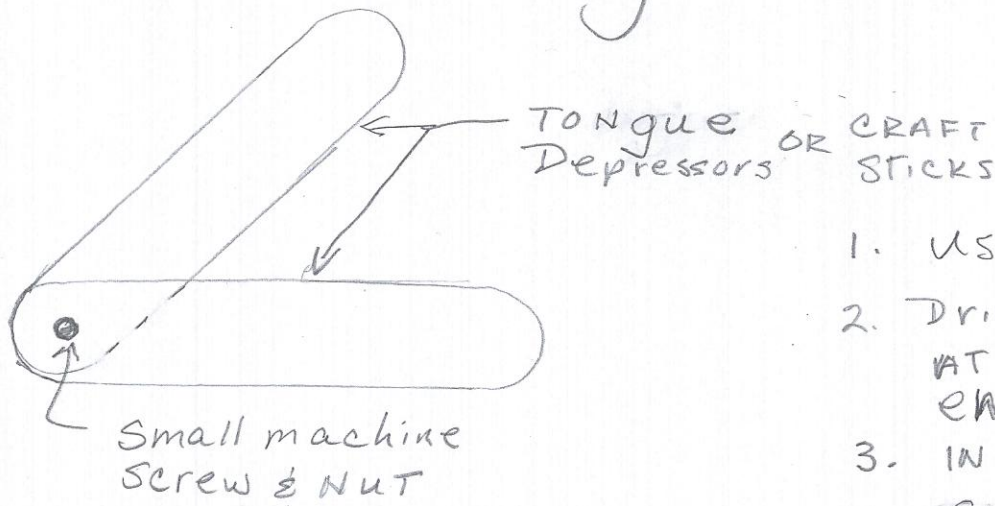

1. USE 2 CRAFT STICKS
2. Drill hole for SCREW AT RADIUS of curved END.
3. INSERT $\frac{1}{4}$ to $\frac{3}{8}$ " LONG SCREW and SNUG up the NUT ON THE BACKSIDE
4. Optional: Superglue NUT to screw only so IT DOESN'T LOOSEN

You now have a very handy tool for checking Angles (roof Line, relationships between lines, etc) when painting.
GREAT FOR Plein Air!

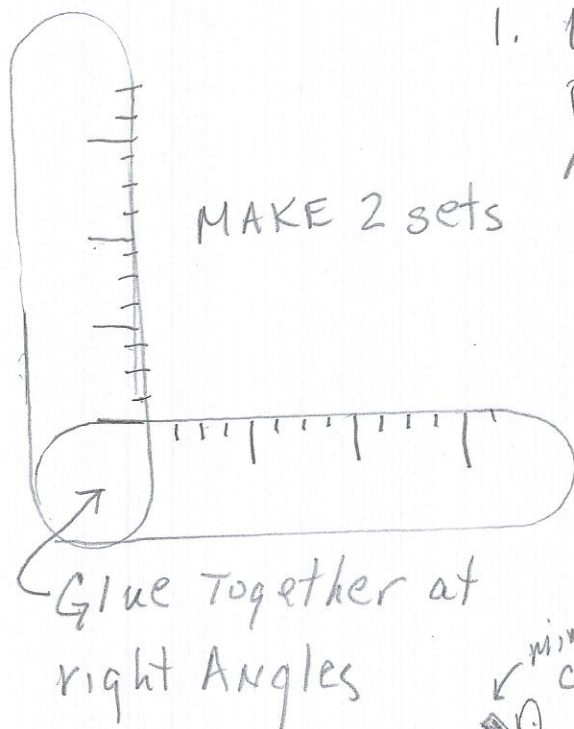

1. Use 4 craft sticks, AND DRAW Rulers on the inside edges of ALL 4 sticks ($\frac{1}{4}$ " marks are enough)

2. Glue 2 sticks together At right angles, with scales to the inside AS shown

3. A small mini clip will now fasten them together into a CANVAS PROPORTIONED VIEW FINDER!

